



**LED Tube Lighting Pty. Ltd.**

**ACN 163 405 810**

Supplier number E2183

Head Office:  
47 Alexandra Rd  
Ascot Qld 4007

T: (07) 3040 0331  
E: [info@ledtubelighting.com.au](mailto:info@ledtubelighting.com.au)  
W: [www.ledtubelighting.com.au](http://www.ledtubelighting.com.au)

## Instructions for rewiring fittings for LED Tube Models - LEDTL-LY-T8

All Model LEDTL-LY-T8 LED tubes will operate in fluorescent fixtures with a magnetic ballast and starter without any alterations. First insert the LED starter and then insert the LED tube.

To improve power factor, remove the capacitor. By removing the capacitor the LEDTL-LY-T8 can achieve close to perfect power factor which is great for the environment.



Removed Capacitor by disconnecting from the power block or cut and cap


All rewiring must be conducted by a qualified electrician

Bypass ballast by removing wires from ballast and joining them together.

To save an additional 4 watts, bypass the magnetic ballast



Fluorescent wiring

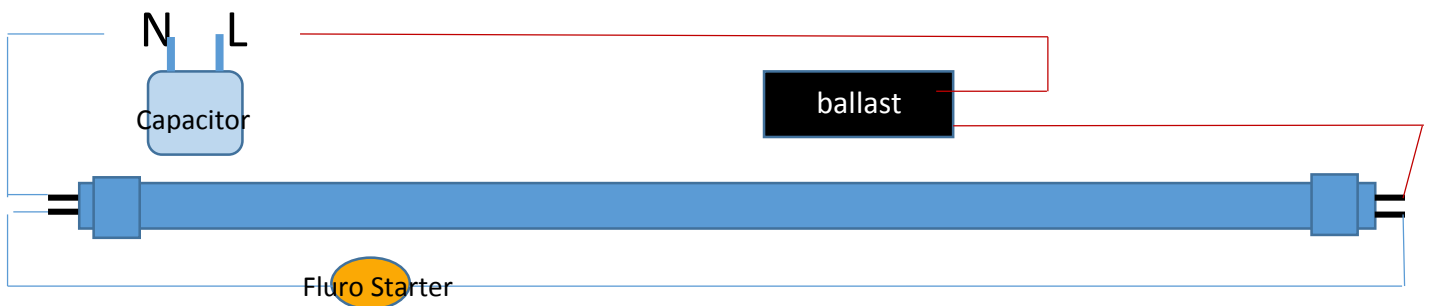

LED rewired to bypass ballast and remove capacitor

